




Installation:

To Install the SNAE-RS serial controller into a chassis, simply slide the module into the right most bottom slot of the chassis and secure it with the two provided thumb screws.

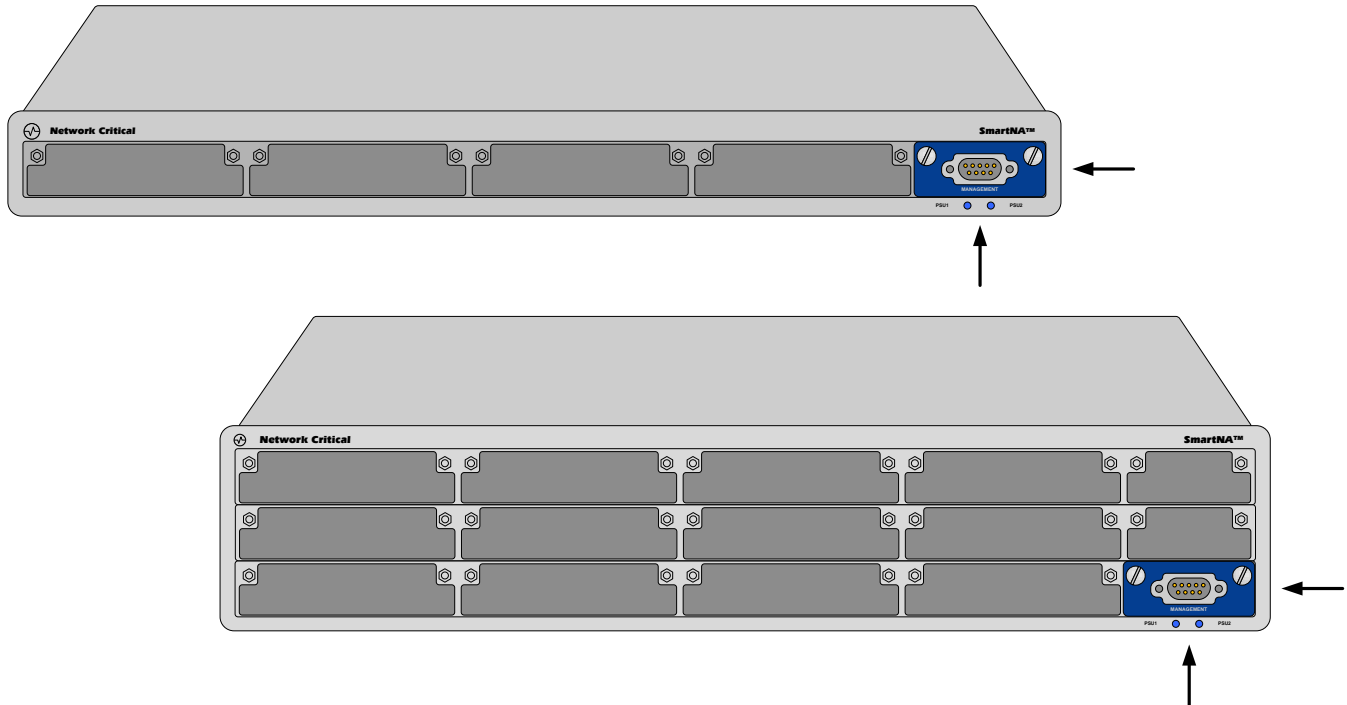

Cabling:

Using a standard DB9 serial cable, connect the SNAE-RS serial controller to your computers serial port(s). You may also choose to manage your chassis via your existing terminal server solution.

Connection Settings:

Baud Rate:	9600
Data Bits:	8
Stops Bits:	1
Parity:	None
Flow Control:	None

