

Configuration of the WanRaptor™ Network Emulator is accomplished from a Personal Computer(PC) using a web browser. Connect your PC LAN port to the MGMT 1 LAN port on the WanRaptor Network Emulator using a CAT-5 cable, no cross-over required.

**NOTE:** Connect your PC CAT5 LAN Cable to MGMT 1 Port on the front of the WanRaptor, Connect Power Cable, Press the RED Power button on the Front of the WanRaptor to Start, Wait 3-4 minutes until the WanRaptor software settles and you hear an audible BEEP. Now, access the GUI as follows:

#### **GUI ACCESS VIA MGMT 1**

- 1) Set your PC Ethernet Port to 192.168.1.50, subnet 255.255.255.0
- 2) WanRaptor™ GUI supports: Google Chrome or Firefox
- 3) Open your browser on local PC and type in the address bar: **192.168.1.100:8080/**  
The GUI web login page will appear and the user should enter as follows:

**User ID: admin      Password: golf**

**Type on web browser address bar:**  
**192.168.1.100:8080**



- 4) After successful connection to the WanRaptor GUI, click on the **SYSTEM SETTINGS** tab, then click on the **MANAGEMENT CONFIGURATION** tab to change MGMT 2 IP Address to your desired network. MGMT 1 is always set to 192.168.1.100 for always good access.

#### **NOTICE:**

MGMT 1 & MGMT 2 may not be on the SAME IP ADDRESS RANGE or the ports will conflict.

**GOOD EXAMPLE:** MGMT 1, set to: 192.168.1.100 and MGMT 2, set to: 192.168.20.1

**BAD EXAMPLE:** MGMT 1, set to: 192.168.1.100 and MGMT 2, set to 192.168.1.31 (they match)

#### **Technical Support:**

East Coast Datacom, Inc.  
245 Gus Hipp Blvd., STE 300  
Rockledge, FL 32955 USA  
Tel: (321) 637-9922  
Email: support@ecdata.com