




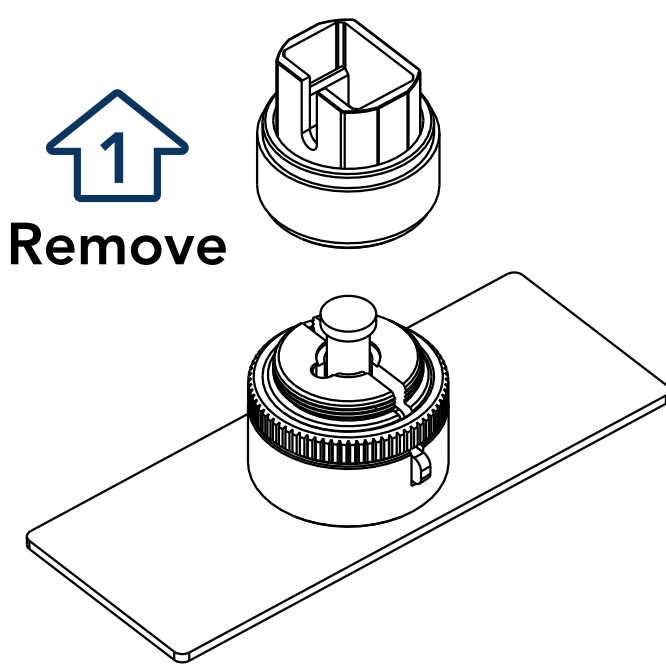


Step 1  
Remove universal adaptor

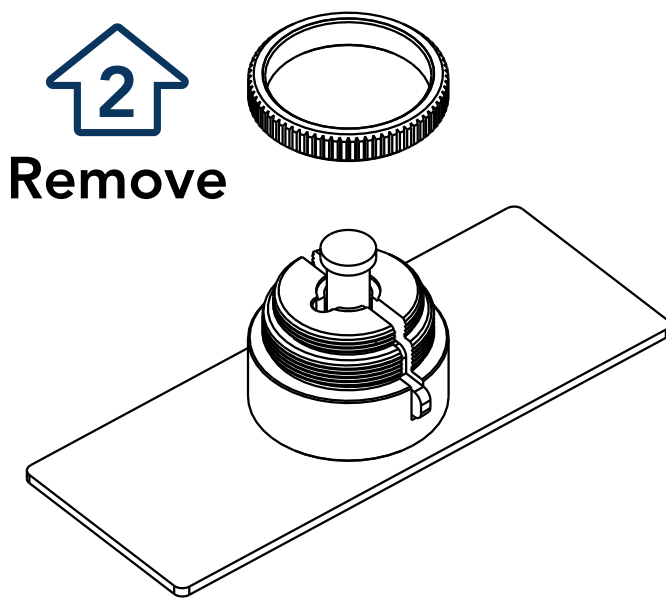


Step 2  
Remove securing ring

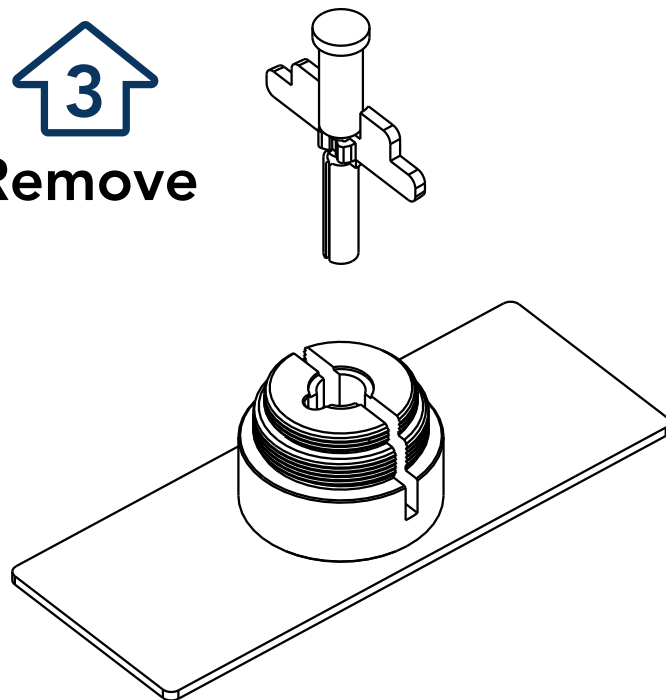


Step 3  
Remove used replaceable ferrule

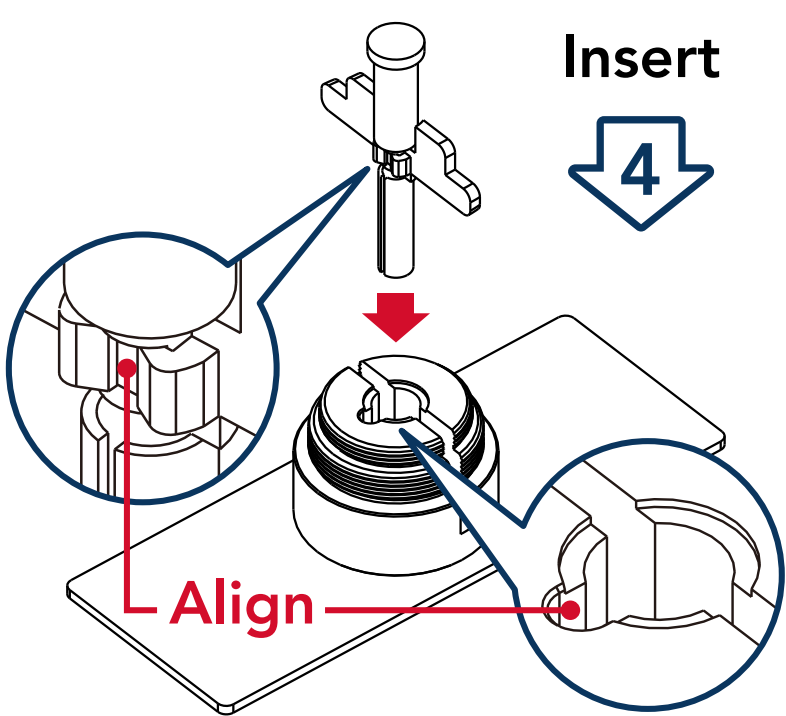

Step 4  
Insert replaceable ferrule

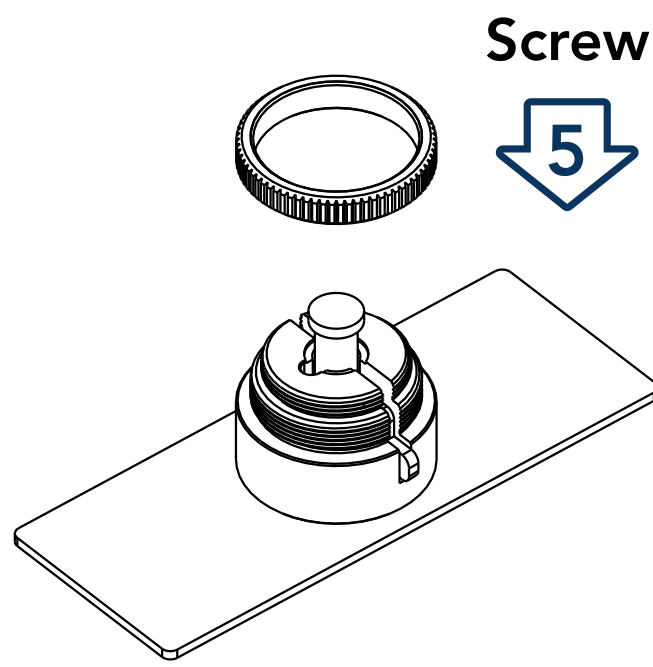

Step 5  
Screw securing ring

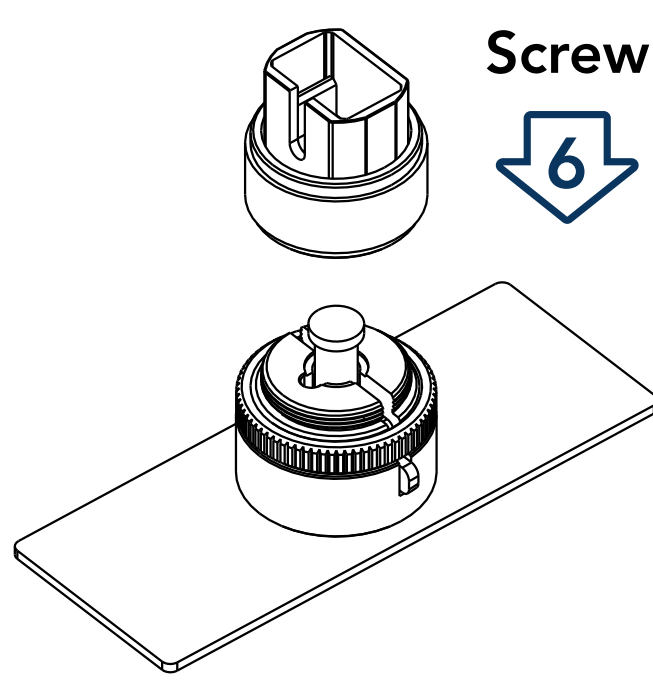

Step 6  
Screw universal adaptor